



# iHome iP1 Buttons Replacement

Replace the dock command buttons on your iHome iP1.

Written By: Wen Sullivan



## INTRODUCTION

Use this guide to replace your iHome iP1's damaged or faulty command buttons. These buttons are located on the front of the iPod/iPhone dock and are used pause/play music and change the volume of the speakers.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Dock Cover



- Orient the iHome upside down with the speakers facing you.

## Step 2



- Remove the two 9.5 mm Phillips #1 screws from the dock cover.



### Step 3



- Remove the dock cover by grabbing its sides and pulling it up and away from the faceplate.

### Step 4 — Buttons



- Disconnect the silver ribbon cable on the left-hand side by pulling away from the command buttons.

## Step 5



- Remove the command buttons by pulling the small black panel containing them downward and away from the faceplate.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 03:05:05 AM.